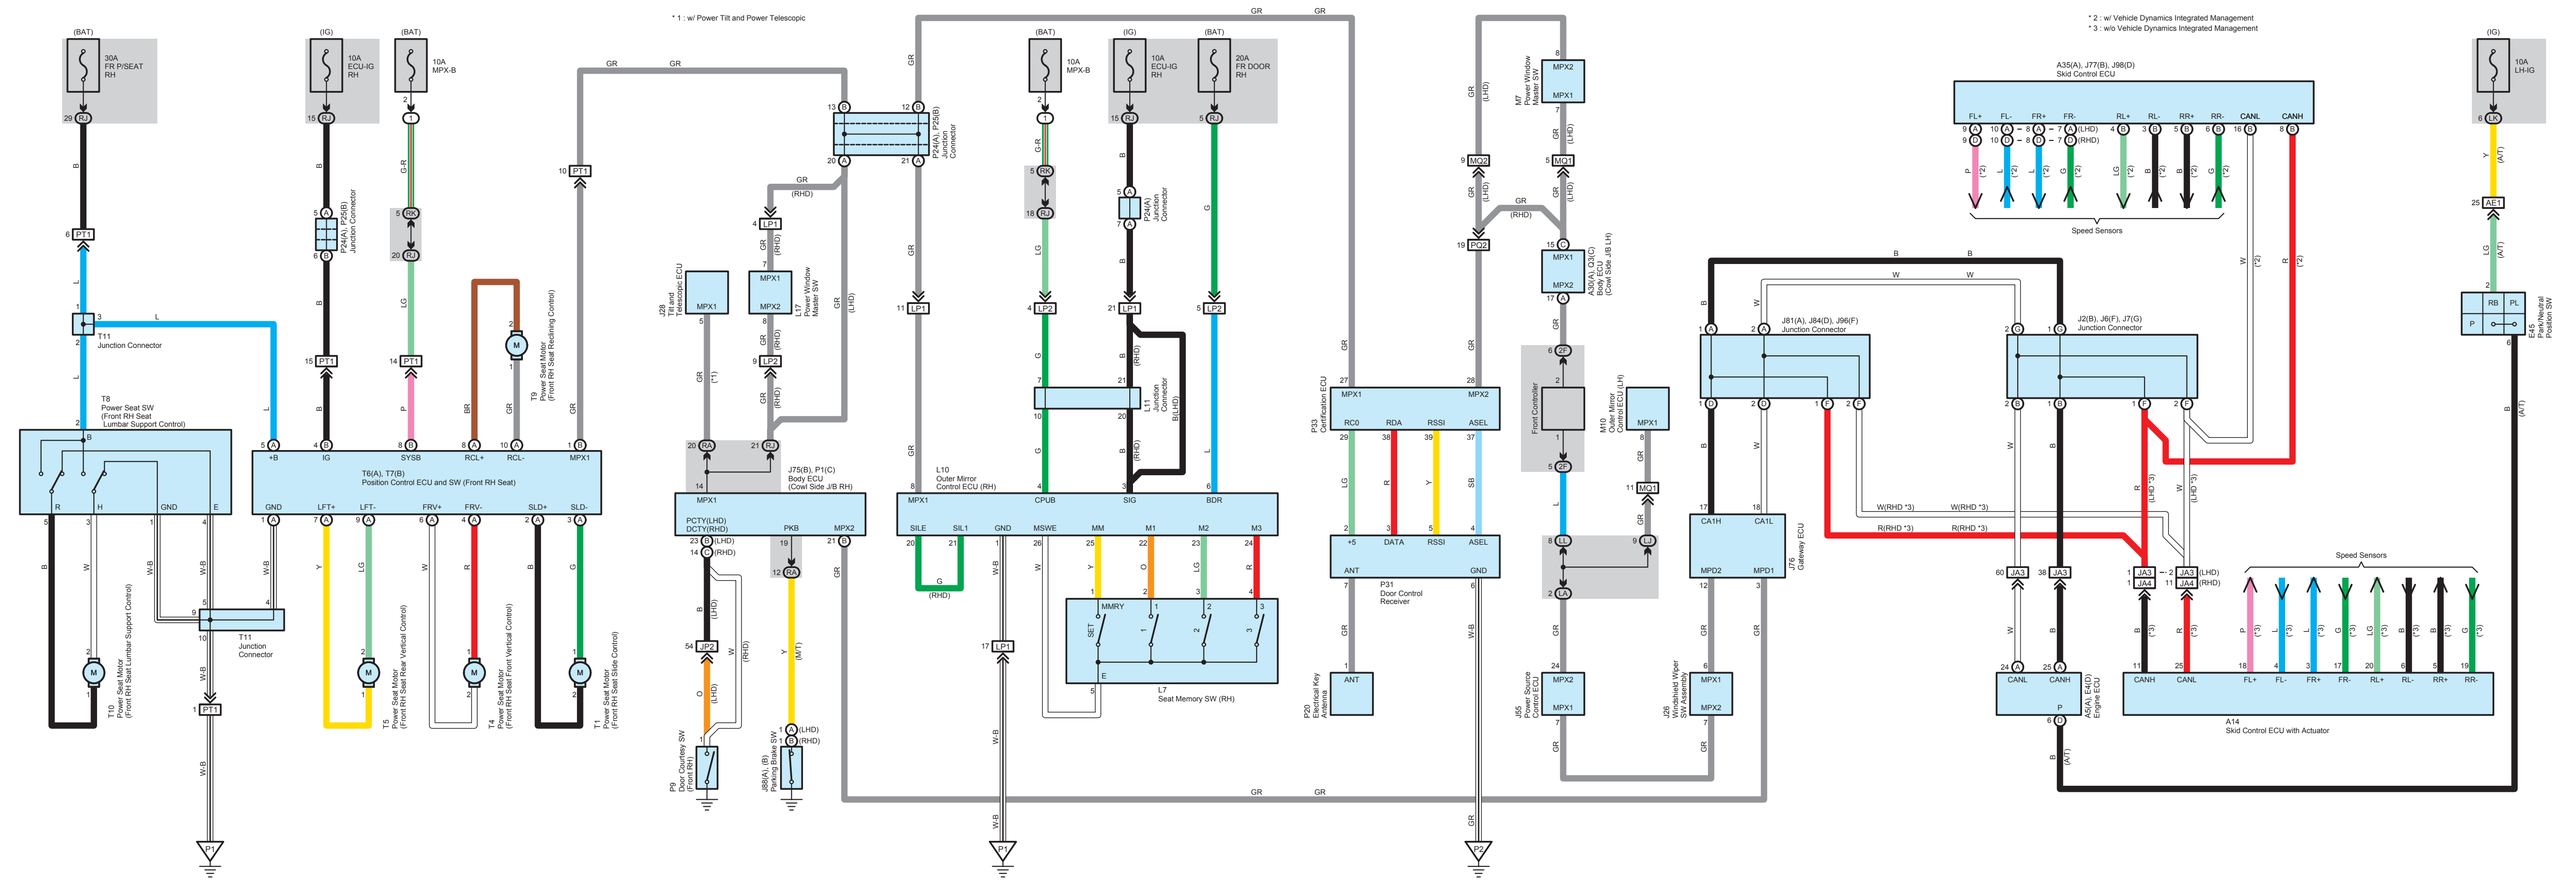
* 1 : w/ Power Tilt and Power Telescopic
* 2 : w/ Vehicle Dynamics Integrated Management
* 3 : w/o Vehicle Dynamics Integrated Management
(BAT)
30A
FR P/SEAT
RH
(IG)
10A
ECU-IG
RH
10A
MPX-B
20A
FR DOOR
RH
10A
LH-IG
T8
Power Seat SW
(Front RH Seat
Lumbar Support Control)
T11
Junction Connector
T10
Power Seat Motor
(Front RH Seat Lumbar Support Control)
T5
Power Seat Motor
(Front RH Seat Rear Vertical Control)
T4
Power Seat Motor
(Front RH Seat Front Vertical Control)
T1
Power Seat Motor
(Front RH Seat Slide Control)
T9
Power Seat Motor
(Front RH Seat Reclining Control)
P24(A), P25(B)
Junction Connector
J28
Integrated
Telescopic ECU
L17
Power Window
Master SW
P24(A), P25(B)
Junction Connector
J75(B), P1(C)
Body ECU
(Cowl Side J/B RH)
L10
Outer Mirror
Control ECU (RH)
L11
Junction
Connector
P9
Door Courtesy SW
(Front RH)
J88(A), (B)
Parking Brake SW
P33
Certification ECU
P31
Door Control
Receiver
P20
Electrical Key
Antenna
M7
Power Window
Master SW
A30(A), (2A)(C)
Body ECU
(Cowl Side J/B LH)
Front Controller
M10
Outer Mirror
Control MECU (LH)
J65
Power Source
Control ECU
J26
Windshield Wiper
SW Assembly
J81(A), J84(D), J96(F)
Junction Connector
J2(B), J6(F), J7(G)
Junction Connector
J76
Gateway ECU
A35(A), J77(B), J98(D)
Skid Control ECU
Speed Sensors
A30(A), E4(D)
Engine ECU
A14
Skid Control ECU with Actuator
E45
Park/Neutral
Position SW
MMRY
SET
L7
Seat Memory SW (RH)
MPX1
MPX2
CANL
CANH
CA1H
CA1L
MPD1
MPD2
ANT
GND
+B
IG
SYSB
RCL+
RCL-
+5
DATA
RSSI
ASEL
CPUB
SIG
BDR
SILE
SIL1
MSWE
MM
M1
M2
M3
PCTY(LHD)
DCTY(RHD)
PKB
RC0
RDA
FL+
FL-
FR+
FR-
RL+
RL-
RR+
RR-
(LHD)
(RHD)
(A/T)
(*1)
(*2)
(*3)
W(RHD *3)
R(RHD *3)
(LHD *3)