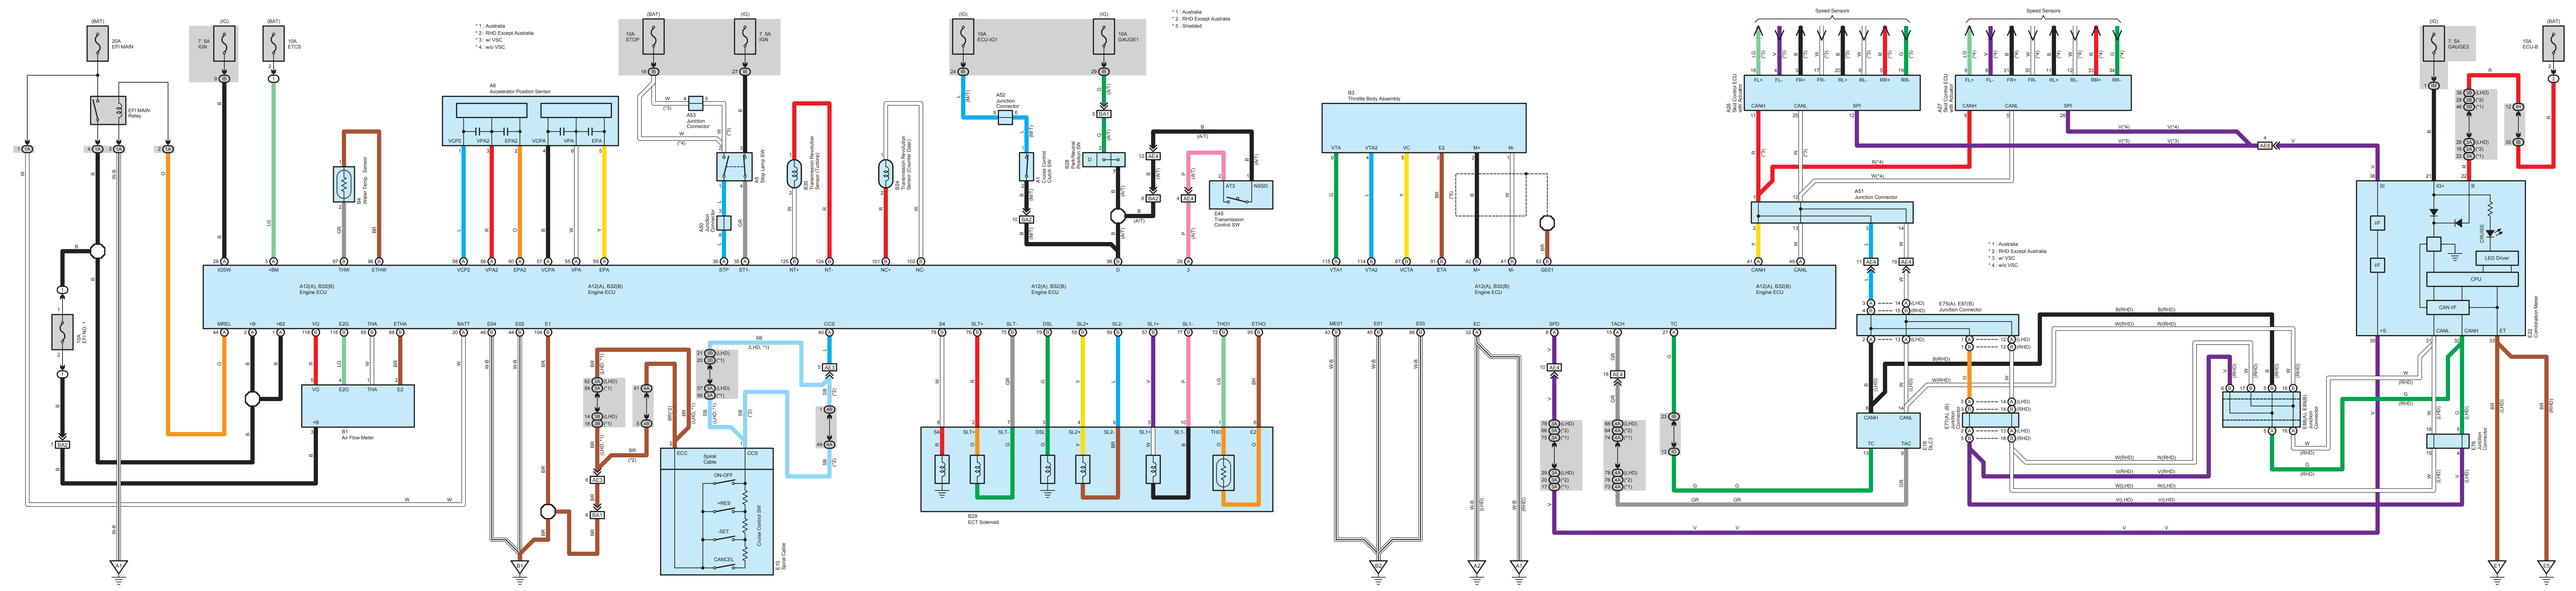
(BAT)
20A
EFI MAIN
EFI MAIN Relay
(IG)
7.5A
IGN
(BAT)
10A
ETCS
* 1 : Australia
* 2 : RHD Except Australia
* 3 : w/ VSC
* 4 : w/o VSC
(BAT)
10A
STOP
(IG)
7.5A
IGN
10A
ECU-IG1
(IG)
10A
GAUGE1
* 1 : Australia
* 2 : RHD Except Australia
* 3 : Shielded
A6
Accelerator Position Sensor
VCP2
VPA2
EPA2
VCPA
VPA
EPA
A53
Junction Connector
A50
Junction Connector
Stop Lamp SW
B26
Transmission Revolution Sensor (Turbine)
B25
Transmission Revolution Sensor (Counter Gear)
A52
Junction Connector
B24
Clock Spring Center Cable (for Cruise Control)
Cruise Control Clutch SW
B3
Throttle Body Assembly
A3
A/T
N/SSD
E45
Transmission Control SW
Speed Sensors
A26
VSC Control ECU (w/o Actuator)
A27
VSC Control ECU (w/ Actuator)
A51
Junction Connector
* 1 : Australia
* 2 : RHD Except Australia
* 3 : w/ VSC
* 4 : w/o VSC
E75(AL,B)
E87(B)
Junction Connector
E75(AL,B)
Junction Connector
E87(B)
Junction Connector
Body ID Display Connector
E15
DLC3
E2
Combination Meter
CPU
CAN I/F
LED Driver
Gauge
A12(A), B32(B)
Engine ECU
B1
Air Flow Meter
B29
ECT Solenoid
E35
Spiral Cable
Cruise Control SW
ON-OFF
+RES
-SET
CANCEL
7.5A
GAUGE2
10A
ECU-B