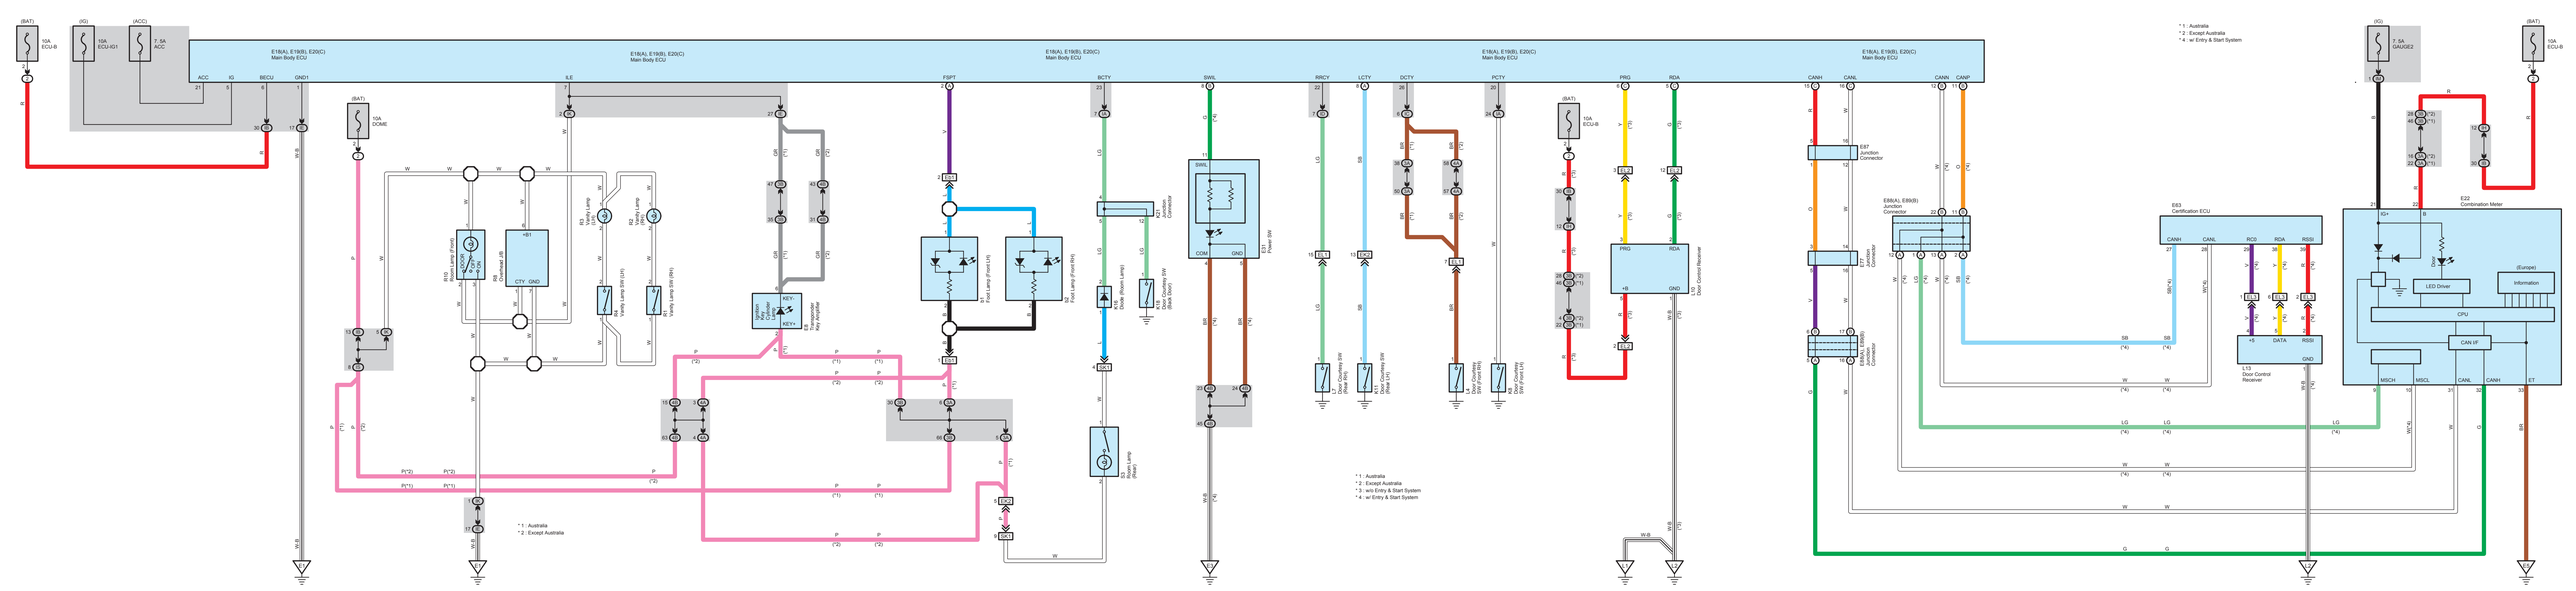
(BAT)
10A ECU-B
(IG)
10A ECU-IG1
(ACC)
7.5A ACC
E16(A), E19(B), E20(C) Main Body ECU
ACC
IG
BECU
GND1
ILE
FSPT
BCTY
BWL
RRCY
LCTY
DCTY
PCTY
PRG
RDA
CANH
CANL
CANN
CANP
10A DOME
R10 Room Lamp (Front)
R9 Map Lamp
R8 Interval Unit
+B1
CTY
GND
R3 Vanity Lamp (LH)
R2 Vanity Lamp (RH)
Vanity Lamp SW (LH)
R1 Vanity Lamp SW (RH)
E9 Immobilizer Key Amplifier
KEY-
KEY+
Front Lamp (Front LH)
Front Lamp (Front RH)
K23 Connector
K22 Diode (Room Lamp)
K10 Diode (Door Courtesy SW)
R4 Room Lamp (Rear)
F31 Power SW
Door Courtesy SW (Front LH)
Door Courtesy SW (Front RH)
Door Courtesy SW (Rear LH)
Door Courtesy SW (Rear RH)
10A ECU-B
Door Control Receiver
E87 Junction Connector
E88(A), E89(B) Junction Connector
E63 Certification ECU
CANH
CANL
RCV
RDA
RSSI
+5
DATA
GND
L13 Door Control Receiver
7.5A GAUGE2
E22 Combination Meter
IG+
B
Door
LED Driver
(Europe)
Information
CPU
CAN I/F
MISCH
MISCL
CANL
CANH
ET
* 1 : Australia
* 2 : Except Australia
* 3 : w/o Entry & Start System
* 4 : w/ Entry & Start System