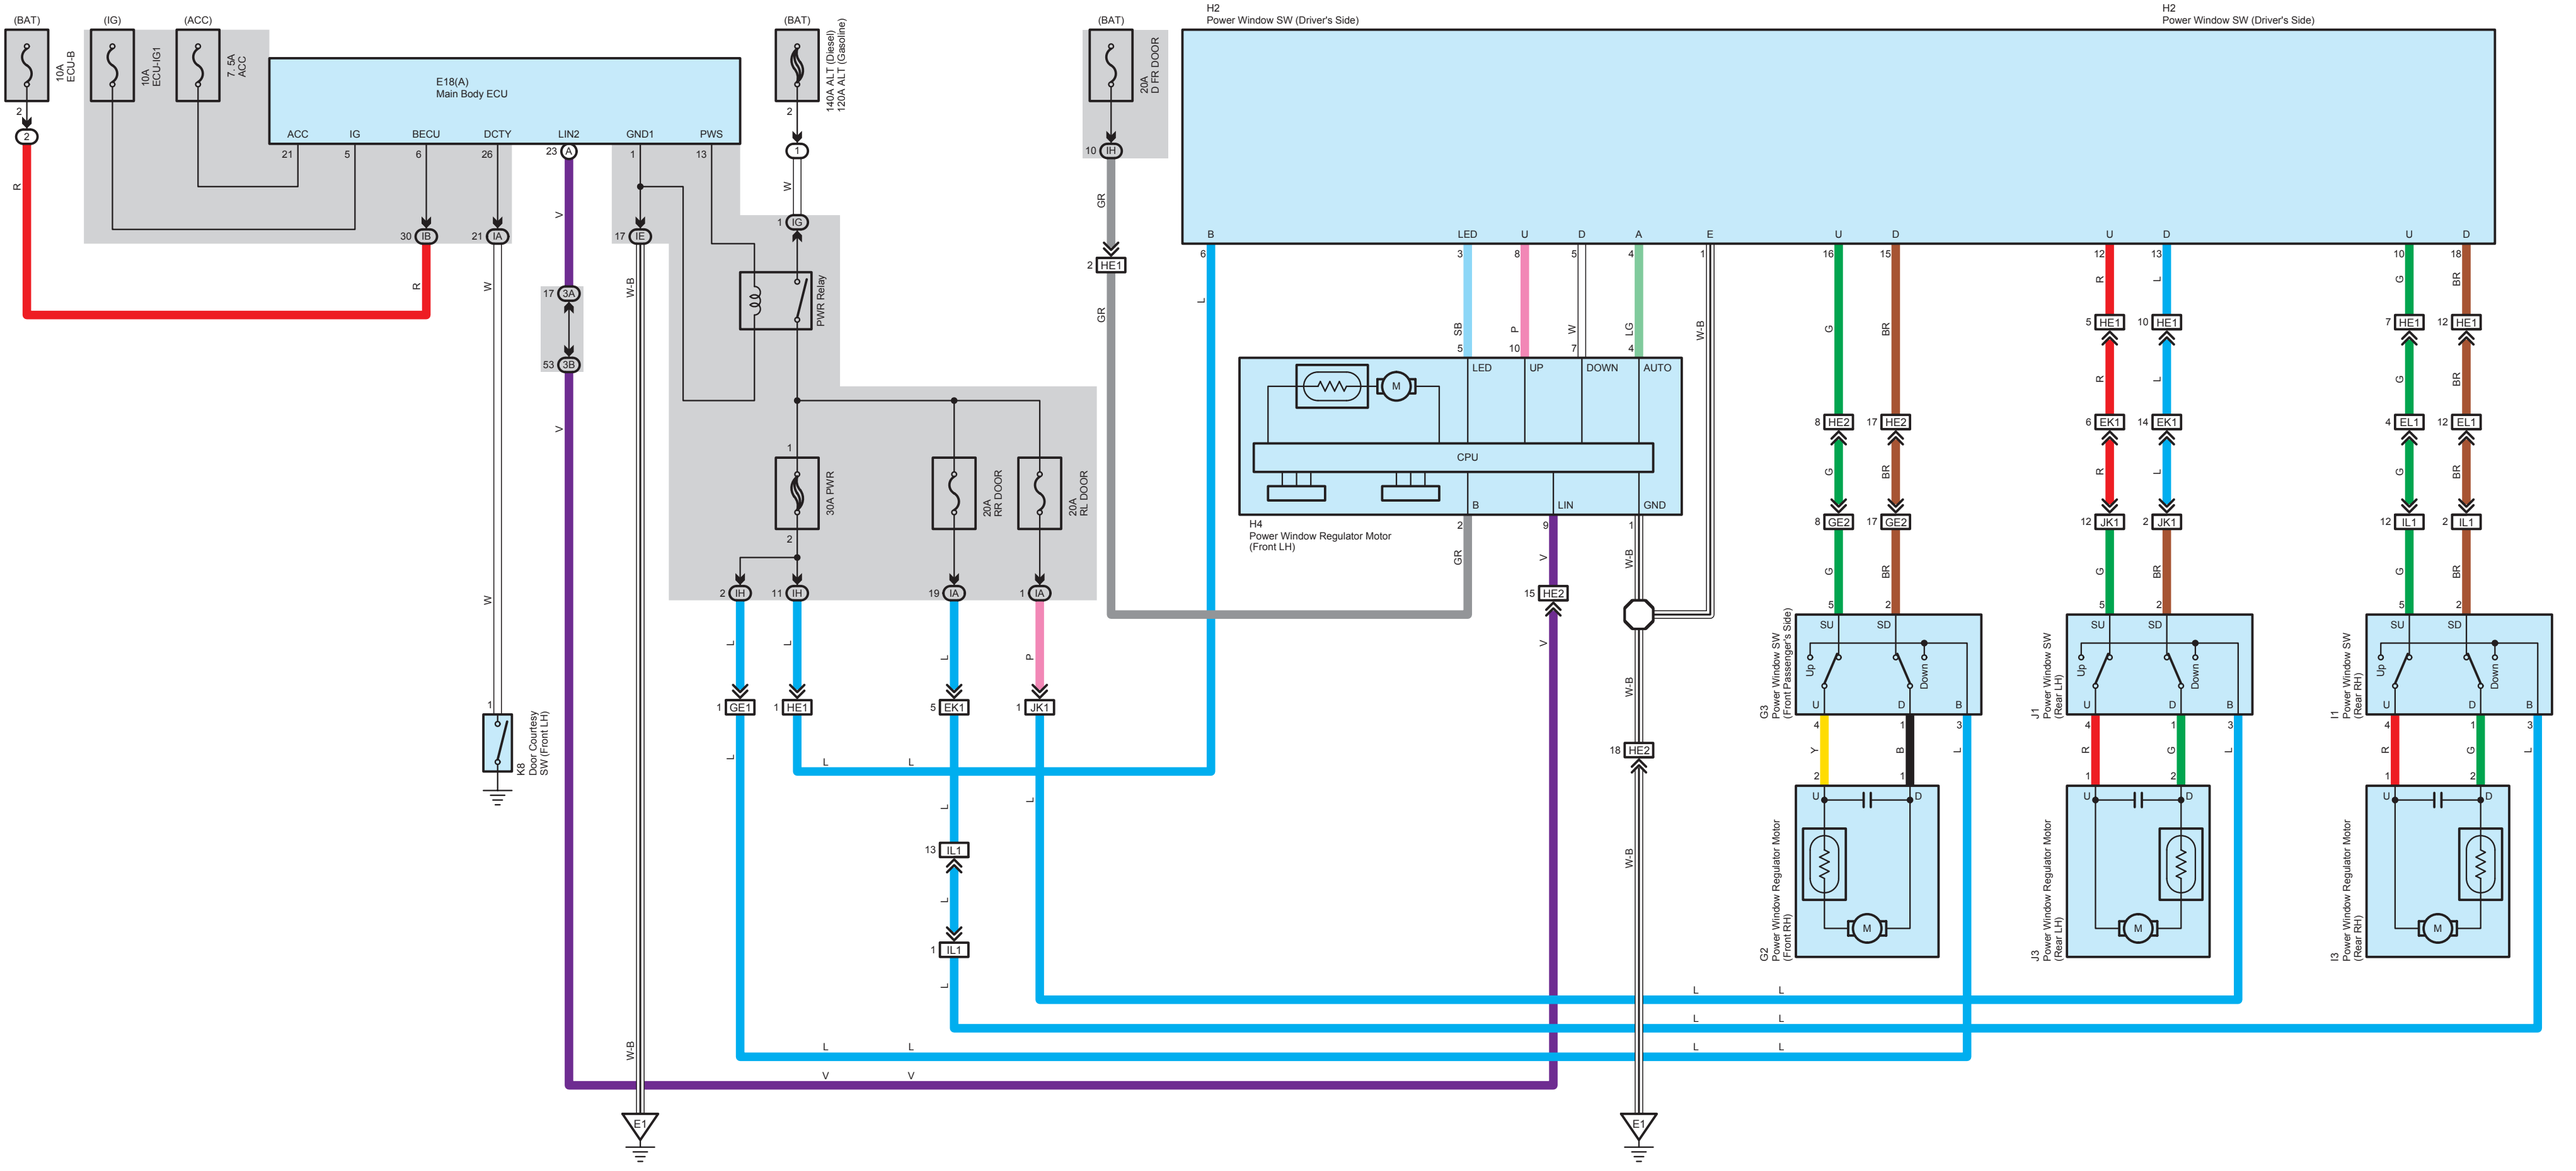
(BAT)
10A ECU-B
(IG)
10A ECU-IG1
(ACC)
7.5A ACC
E18(A)
Main Body ECU
ACC
IG
BECU
DCTY
LIN2
GND1
PWS
(BAT)
140A ALT (Diesel)
120A ALT (Gasoline)
PWR Relay
30A PWR
20A RR DOOR
20A RL DOOR
R8
Door Courtesy SW (Front LH)
E1
(BAT)
20A D FR DOOR
H2
Power Window SW (Driver's Side)
H2
Power Window SW (Driver's Side)
LED
UP
DOWN
AUTO
CPU
LIN
GND
H4
Power Window Regulator Motor (Front LH)
G3
Power Window SW (Front Passenger's Side)
G2
Power Window Regulator Motor (Front RH)
J1
Power Window SW (Rear LH)
J3
Power Window Regulator Motor (Rear LH)
I1
Power Window SW (Rear RH)
I3
Power Window Regulator Motor (Rear RH)
Up
Down